

# ROOT 66

## Parts List and Diagrams

CATALOG NO.	DESCRIPTION	CATALOG NO.	DESCRIPTION
66-100	Frame and Clutch Housing Assembly	66-25-0	Small Container (for 5/16" cables)
66-101	Clutch Housing	66-401-1	Small Container Shell
66-101-A	Grease Fittings (2)	66-402	Spindle for Small Container <b>Disc.</b>
66-101-B	Bronze Bushing	66-403	Ball Bearing
66-102	Rear Casting	66-404	Mounting Collar with Knob
66-102-A	Grease Fitting (1)	66-404-A	Knob
66-102-B	Hex Head Bolts (4)	66-404-B	Set Screws (3)
66-110	Drip Guard	66-404-C	Grease Fitting
66-150	Leg Assembly	66-405	Flange Bearing Set (2)
66-150-A/B	Left & Right Leg Assembly	66-406	Steel Washer <b>Discontinued</b>
66-150-C	Rubber Pads, Screws & Washers (4)	66-407	Fiber Washers (3)
66-150-D	Front Leg Spacer	66-408	Brake Disc
66-150-E	Rear Leg Spacer	66-409	Spacer
66-150-F	Bolts (4)	66-410	Slotted Tube
66-160-1	Cutter Holder Assembly	66-411	Snap Ring
66-160-2	Cutter Holder Assembly	66-415	Lock Washer <b>Discontinued</b>
66-160-A	Cutter Holder Rod	66-35-0	Large Container (for 3/8" cables)
66-160-B	Bracket <b>Disc.</b>	66-451	Large Container Shell
66-160-C	Screws & Lock Washers (2)	66-451-A	Container Front
66-200	Clutch Assembly	66-451-B	Container Back
66-210	Ball Thrust Bearing	66-451-C	Screws and Clips (3)
66-215	Shaft with Key	66-452	Spindle for Large Container
66-220	Large Bevel Gear with Set Screw	66-456	Washer (2)
66-225	Front Cone with Pins	66-465	Nut
66-225-A	Guide Pins (3)	66-600	1/3 hp Motor with Reverse Switch and Ground Fault Interrupter
66-225-B	Shaft Pin (1)	66-600-1	1/2 hp Motor with Reverse Switch and Ground Fault Interrupter
66-234	Clutch Jaws and Springs (3)	66-601	Small Bevel Gear with Set Screws
66-234-B	Springs only (3)	66-602	Mounting Bolts (2)
66-235	Rear Cone w/Shaft	66-604	Ground Fault Interrupter with 10 ft. Power Cord
66-240	Ball Thrust Bearing	66-605	Reverse Switch Assembly
66-300	Rack and Pinion Assembly	66-605-A	Switch Box Only w/ Cover & Screws
66-301	Pinion Gear	66-605-G	Reverse Switch
66-305	Clutch Handle	66-605-H	Rubber Switch Boot
66-307	Retaining Knob	66-610	Motor Drip Shield
66-310	Drive Collar (Rack)	66-RGH	Rear Guide Tube
66-315	Hair Pin Spring	66-W	Dolly for Root 66
66-320	Retaining Washer		
66-325	Snap Ring		
66-330	Coil Spring		

**General Wire Spring Co.**

1101 Thompson Avenue

412/771-6300

McKees Rocks, PA 15136 U.S.A.

